



MULTI-FUNCTION ROBOTIC VACUUM CLEANER

Model NO.: Hovo 700 Series

USER MANUAL

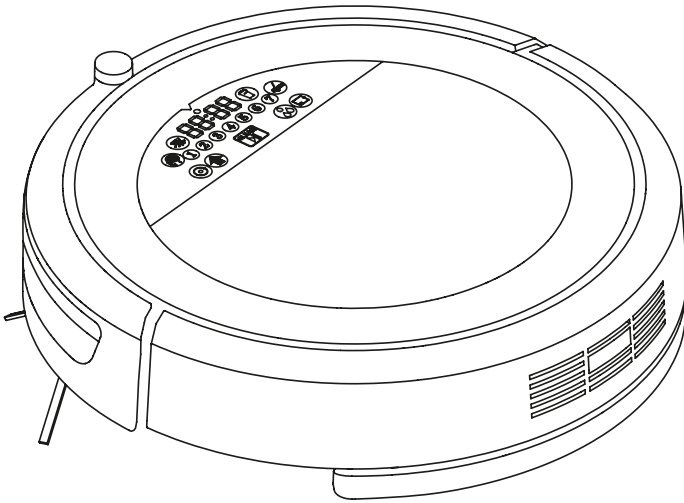


Table of Contents







Table of Contents	01
Safety Instructions	02
Product Features	03–04
Product Accessories and Anatomy	
Main Unit and Accessories	05
Anatomy of the Main Unit	06
Unit Display Panel	07
Installing the Battery	08
Product Operations and Settings	
Auto Charging Dock Station	09
Remote Control	10
UV Lamp and Water Seeping Speed Settings	11
Clock and Cleaning Schedule Settings	12
Virtual Blocker Settings	13
Product Maintenance	
Installing/Removing/Cleaning the Dust Bin	14
Removing the Roller Brush	15
Installing the Roller Brush	16
Installing/Removing the Suction Inlet	17
Installing the Trailing Bar, Mop, and Water Tank	18
Error Codes and Troubleshooting	19
Technical Specifications	20

Safety Instructions













Before using this product, please read the following safety instructions and follow all routine safety precautions!

- Please read these instructions carefully.
- Please store this manual properly.
- Any operation not in compliance with this manual is likely to cause damage to the product.

Warning

Anyone except our designated service technicians may not disassemble, repair or modify the product. Otherwise it may lead to fire, electric shock or injury.		Do not use any recharger other than the one accompanying this appliance. Otherwise it may cause fire resulting from product damage, electric shock or high voltage.	
Do not touch any high voltage power cable of the appliance with wet hands, as this may cause electric shock.		Not over bend the power cord or place heavy objects on it. Doing so may damage the cord, causing a fire or electric shock.	
Attention must be paid to avoid clothes or any part of body (head, fingers, etc.) getting involved in the brush or wheels of the vacuum cleaner. Doing so may result in personal injury.		Keep it from cigarettes, lighters, matches and heat source objects and from flammable materials (such as using gasoline to clean the machine).	

Attention

Turn off the power before transporting or relegating it to prolonged storage. Otherwise, the battery may be damaged.		Plug the power cord of the recharger tight, or it may cause electric shock, short circuit, smoke or fire.	
Check the connection between the recharger and the socket for reliability. Otherwise it may result in non-charging and consequential fire.		To prolong battery life, recharge it for at least 16 hours after the first use or before reuse after a long idle period. The battery will not achieve its optimum performance until 2-3 complete recharging-discharging cycles.	
Before leave vacuum cleaner to a long idle period, please recharge the battery to its full, then take the battery to a cool place, keep bottom to keep the bottom of the appliance dry.		Prior to use, remove all damage-prone objects (luminous objects, fabrics, glass bottles, etc.). Otherwise it may cause damage to these objects, or affect the performance the appliance.	
Please use the cleaner with caution in the presence of children to avoid being starting or hurting them.		Do not stand or sit on the vacuum cleaner so as not to cause damage to it or injuries to human.	
Attention: Do not let the robot inhale water and other liquids, Otherwise it may lead to product damage.		Do not use the vacuum cleaner in confined spaces (small table, chair) which may lead to product damage.	
Outdoor use is prohibited, as doing so may cause product damage.		Do not use the vacuum cleaner on commercial premises, otherwise product damage may follow excessive use.	

Product Features

1 Patent Intelligent programmable water tank

The cleaner can control the water seeping speed of the water tank automatically. You can select the water seeping speed through the remote control to achieve the optimal uniform wet mopping effect. While charging, water seeping will be shut automatically to prevent water leakage.

2 Intelligent voice prompts

Intelligent voice prompts for power-on, malfunction, full dust bin, mis-operation, water tank empty, etc.

3 Multi-function double dust bin

Each package includes two dust bins: one large capacity dust bin (0.9L) used for normal vacuum cleaning, and a regular capacity dust bin (0.6L) combined with one small dust bin (0.2L) used for vacuuming & wet mopping.

4 Patent ONE COVER ALL cleaning system

Patent V-shaped brush made of soft wool suitable for tiles, marble, and wood floors. Also includes a rear brush made of rubber suitable for carpet deep cleaning.

5 Patent 3D UV sterilization

3D UV kills bacteria on floors, the suction inlet, and inside of the dust bin.

6 Patent 3D filter

The 3D conditioning level filter (effectively preventing clogging when the dustbin is close to full) + HEPA filter prevent secondary air pollution. The dust bin and 3D filter can be washed directly.

7 Two-way virtual blocker

The virtual blocker creates an invisible barrier that the cleaner will not cross. This can confine the cleaner to a particular room or area.

Product Features

8 Swap between suction and sweeping

The cleaner can swap between suction (mainly used for long carpet to avoid getting tangled) and sweeping according to floor conditions. Refer to page 15–17 for details on swapping between suction and sweeping.


9 Super suction power

The suction power of the cleaner is up to 40W and can even pick up fine dust.


10 Intelligent suction adjustment

When detecting lots of dirt, the cleaner will adjust the suction power automatically, which greatly improves the cleaning efficiency and also saves as much as 30% on electricity.

11 Garbage detection

When detecting garbage, the cleaner will automatically increase suction power. When the dust bin is full, the cleaner will give a voice prompt and light up the “” icon on the display panel.

12 User-friendly design

Regardless of elders or children, a simple touch on the “” icon and the cleaner will run automatically.

13 Super wide off-road wheel design

Super wide wheel avoids slipping when the cleaner is wet mopping.


Product Anatomy and Accessories

This product is for home use only and can clean a variety of household floors including: short carpets, wood, and ceramic tile, etc.


Functionality overview

The unit works on a rechargeable lithium-ion battery and microcomputer control. It is an intelligent vacuum cleaner that features UV sterilization, various automatic cleaning modes, vacuuming, wet mopping, scheduled cleaning, remote control, and automatic recharging.


Main Unit and Accessories

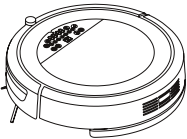


Cleaner × 1

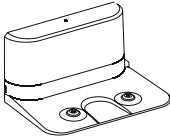


Charging dock station × 1

 


Remote control × 1

 


Power adapter × 1

 


Trailing Bar × 1
(Hovo 780 only)

 


Mop × 2
(Hovo 780 only)

 

 Cleaning Brush × 1
(Mounted on the Dust Bin)



Suction Inlet × 1
(Hovo 780 only)

 

Virtual Blocker × 1



HEPA Filter × 1



 
User Manual × 1



Small Dust Bin × 1
(Please assemble with
water tank before use,
see Page 18)



Water Tank × 1




Side Brush × 4
(Please fix two on the cleaner before use)


Product Anatomy and Accessories

Anatomy of the Main Unit


Top View

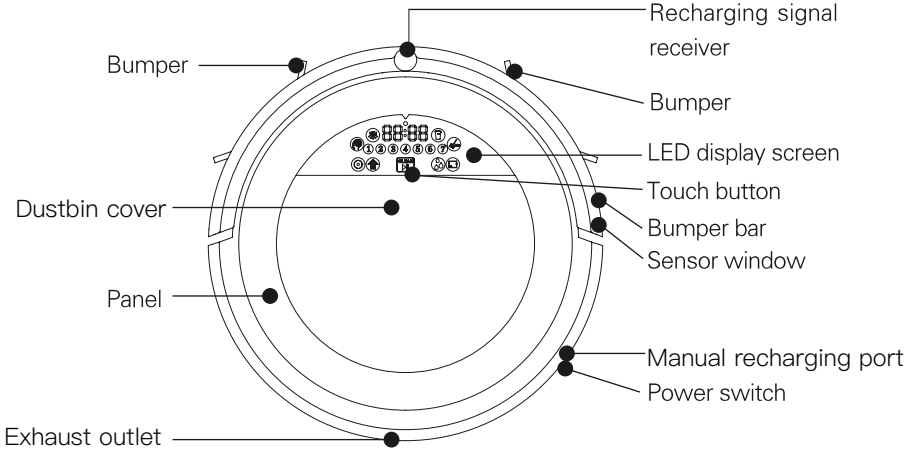

Bottom View

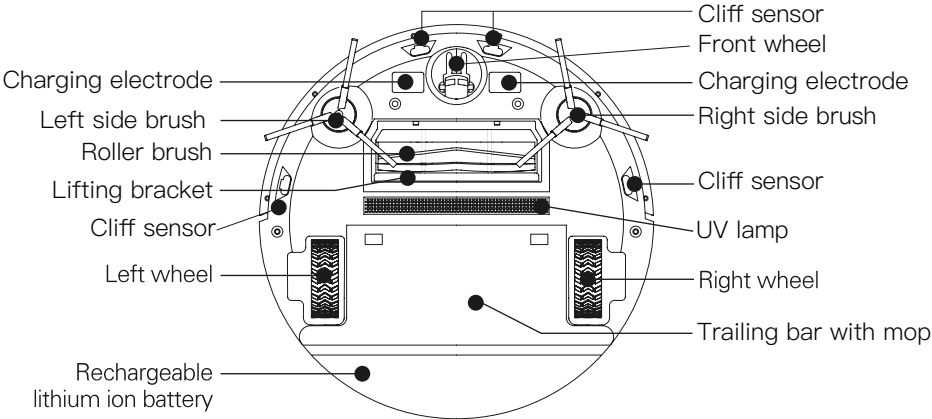

Unit Display Panel

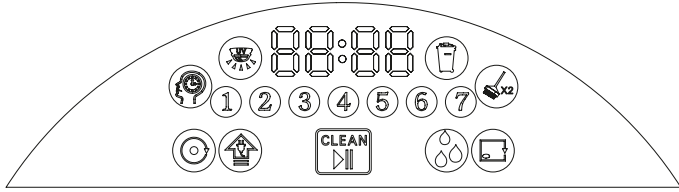

Auto cleaning button

Press this button and the cleaner will start automatic cleaning until the power is low, at which point it will automatically return to the auto charging dock station. During the course of cleaning, touch this button and the cleaner will stop.



Spot cleaning indicator

When this button is on, the unit will automatically enter into Spot cleaning mode with a 1 square meter spiral pattern for approximately 2–3 minutes; during the cleaning process, press any button on the remote control to stop.



Docking indicator

Press the "HOME" on the remote control and the cleaner will seek the docking station for charging.



Schedule indicator

Press the TIMER "L" button and Spot "SPOT" button on the remote control. The " icon on the display panel will light up, and the cleaner will enter into the current day/hour/minute setting and schedule day/hour/minute setting (see page 11 for the clock and schedule cleaning settings).



UV sterilization indicator

When the cleaner is on standing by, press the "TIMER" + "XXL" button on the remote control to turn off/turn on the UV lamp. (For details, see page 11.)

Attention: By default, UV sterilization is turned on.



Digital indicator

An error code will display during a malfunction, for instance: E001 will be displayed as **E0:01**

Displays day/hour/minute, for instance: Tuesday 08:28 A.M. will be displayed as 2 and **08:28**

Days will be displayed as: 1,2,3,4,5,6,7

During auto charging, **11:11** will light up and when fully charged will display **FULL**



Before charging be sure to turn the power switch to ON.

Before cleaning, tidy up any small items or obstacles in the area, especially any power cords or other clutter. When the battery is low during cleaning, the cleaner will stop, beep five times, light up the recharging touch light, and automatically return to the auto charging dock station.

Unit Display Panel



Garbage indicator

When the "🗑️" icon lights up, it indicates that either the dust bin is full, the suction inlet is clogged, or the garbage sensors are covered with dust.



FULL GO indicator

When the cleaner is on standby, press the "🧹" button on the remote control and the cleaner will enter FULL GO mode. In this mode, the cleaner will automatically clean one more time after it is fully charged.



Wall follow cleaning indicator

When the cleaner is on standby, press the "WALL" button on the remote control and the cleaner will enter wall follow cleaning mode.



Water seeping speed indicator

First install the small dustbin with the water tank (refer to page 14 to install). The cleaner will automatically launch into the wet mopping mode. Press the "CLEAN" button to start auto cleaning & mopping and the "💧" will light up or blink.

When the water tank runs out of water, this icon will turn off, display error code E012; and prompt "inject water, please". To continue this function during cleaning, take out the water tank and refill it. The indicators are normally on in the default mode, blinking indicates it is in fast water seeping speed (See page 10 for more).



1. It is recommended to clean dust off of the suction inlet and dirt sensor when emptying the dust bin.
2. When the main unit is cleaning, the path follows default settings but when it detects any dirt, it will automatically switch to Spot cleaning.
3. To maximize the wet mopping effect, please fill the water tank to the fullest.

Installing the Battery

1. To install the battery, use a screwdriver to loosen the four screws on the half-moon shaped bottom shell, and remove the battery cover (see Fig.1).
2. When installing the battery, connect the snap joints of the two terminals (see Fig. 2).
3. If the cleaner is left unused for a long time, recharge it once a month on a regular basis to maintain the battery for optimal use.
4. The battery can only be replaced with a battery from the original manufacturer, otherwise it may cause damage to the main unit.

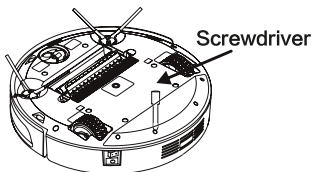


Fig.1

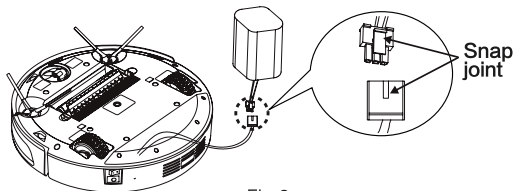


Fig.2

Product Operations and Settings

Auto Charging Dock Station

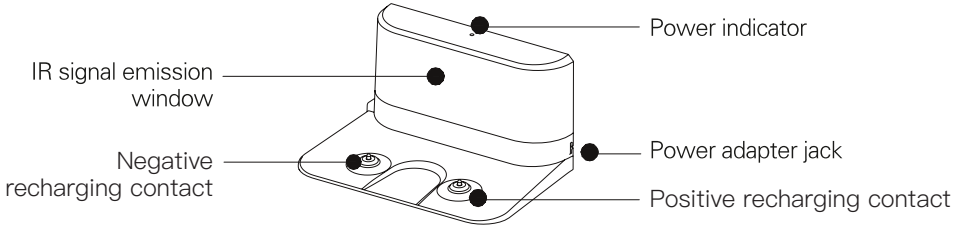


Fig.1

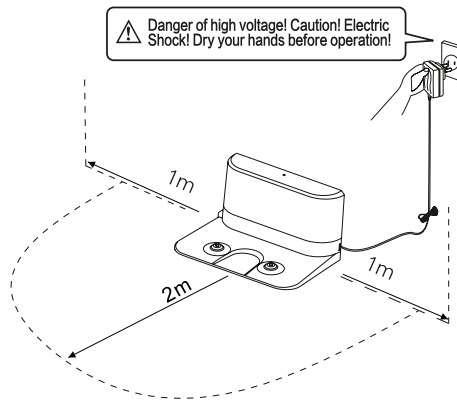


Fig.2

Instructions for the charging dock station

1. Securely mount the charging station on flat ground and a wall near and perpendicular to the ground.
2. Avoid obstacles and uneven areas within 2m in front of the docking station and 1m on both sides.
3. If the infrared signal emission window of the charging station is blocked, the cleaner will be unable to find the charging station for charging.
4. Keep the power cord clear of the charging station and do not leave the power cord on the ground.

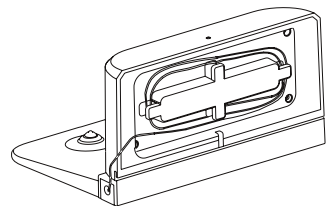


Fig.3

Product Operations and Settings

Remote Control Operations



Fig.1

- Press "HOME" and the cleaner will enter auto charging mode.
- Press "POWER" and the cleaner will enter the sleep/wake-up mode (in sleep mode, press and hold this button for 10 seconds to enter the wake-up mode).
- Press "TURBO" and the cleaner will enter Turbo cleaning mode. This mode increases cleaning power to provide a deeper clean suitable for dirty floors.
- Press "WALL" and the cleaner will enter Wall follow cleaning mode.
- Press "SPOT" and the cleaner will enter Spot cleaning mode.
- Press "XXL" and the cleaner will enter FULL GO mode.
- Press "TIMER" and the cleaner will enter the cleaning schedule, UV lamp ON/OFF, and water seeping speed (this is a combination button, see page 11–12 for more).
- Press "START/STOP" and the cleaner will enter automatic cleaning mode.
- Press "▲" and the main unit will start forward movement.
- Press "▼" and the main unit will start backward movement.
- Press "◀" and the main unit will start leftward movement.
- Press "▶" and the main unit will start rightward movement.

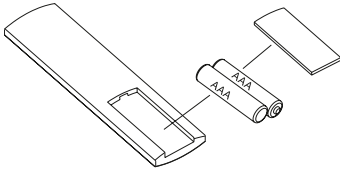


Fig.2

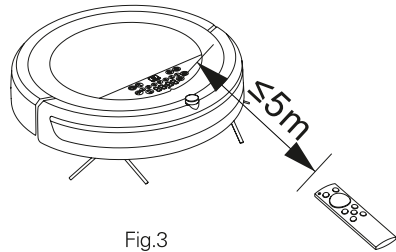


Fig.3



1. Place two AAA batteries in the remote control. (As shown in Fig. 2)
2. When controlling the cleaner with the remote control, aim the remote control at the sensor head of the cleaner, and keep it within 5m from the cleaner.

Product Operations and Settings

UV lamp settings:

By default the UV Lamp is on, to turn it off follow the steps below:

1. In standby mode, press the "TIMER" button, then press the "XXL" button to enter the UV lamp settings (the UV lamp icon on the cleaner will flash);
2. Press the "▲" button to turn the UV lamp on and the screen will display "1:1:1";
3. Press the "START/STOP" button to save the current settings and return to standby mode.
4. Press the "▼" button to turn the UV lamp off and the screen will display "00:00";
5. Press "POWER" to save the current settings and exit to standby mode.

Water seeping speed settings:

By default, the water seeping speed is on standard; to switch to fast water seeping speed follow the steps below:

1. In standby mode, press the "TIMER" button, then press the "WALL" button to enter the water seeping speed settings (the water droplet icon "☉" on the cleaner will flash).
2. Press the "▲" button and the "☉" on the cleaner, the screen will display "1:1:1", indicating the water tank is in the standard water seeping mode, suitable for wood floors, as too much water will ruin the wooden floor. This mode is also suitable for clean floors.
3. Press the "START/STOP" button to save the current settings and return to the standby mode.
4. Press the "▼" button and the "☉" on the cleaner, the screen will display "00:00" the water tank is in the quick water seeping mode, suitable for tile/marble or dirty floors.
5. Press the "START/STOP" button to save the current settings and return to the standby mode.
6. Press "POWER" to save the current settings and exit to standby mode.



After settings are complete, press the "POWER" button, the cleaner will automatically save the settings and exit to standby mode.

Product Operations and Settings

Setting the clock

1. Setting the current day:

- In the standby mode, press the "⌚" button, then press the "Ⓢ" button to set the day of the week; press the "◀", "▶" buttons to switch from Monday–Sunday.
- Press the "▲" button to select a day; press the "▼" button until it flashes to cancel a day.
- Press "▲" to save the current day and enter the hour/minute settings.

2. Setting the current hour/minute:

After the Settings of current week day is done, press the "⌚" button to enter the specific Settings of current hour/minute.

Press the "▲" and "▼" buttons to switch hour/minute;

Press the "▶" button to increment the current time, and press the "◀" button vice versa;

Press the "⌚" button to save the Settings of appointment hour/minute and exit to the standby mode;

Cleaning schedule settings

1. Settings of Schedule week day:

In the standby mode, press the "⌚" button, then press the "Ⓢ" button to enter the Settings of schedule week day; press the "◀", "▶" buttons to switch Monday/Sunday;

Press the "▲" button until it is normally on to select a week day ; press the "▼" button until it flashes to cancel a week day;

Press "⌚" to save the appointed week day and enter the Settings of appointed hour/minute;

2. Settings of schedule hour/minute:

After the Settings of schedule week day is done, press the "⌚" button to enter the Settings of appointed hour/minute.

Press the "◀" and "▶" buttons to switch hour/minute;

Press the "▶" button to increment the appointed time, and press the "▼" button vice versa;

Press the "⌚" button to save the Settings of schedule hour/minute and exit to the standby mode;

 
 

Press the "⌚" button to save the settings and enter the week day settings of schedule cleaning.




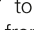 

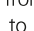 
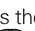 



After settings are complete, press the "Ⓢ" button, the cleaner will automatically save the settings and exit to standby mode.

Product Operations and Settings

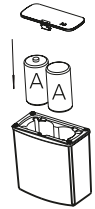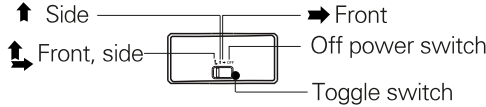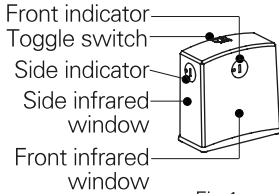Virtual Blocker Settings




- Toggle “” to turn off the power for virtual house, switch among front, side, and front/side;
- Toggle “” to Off: the power of virtual house is cut off.
- Toggle “” to “” position: it indicates the power of the virtual house is on, at this point of time, this is the front position, and the control radius of the virtual house is 4 m.
- Toggle “” to “” position: it indicates the power of the virtual house is on, at this point of time, this is the sidewise position, and the control radius of the virtual house is 4 m.
- Toggle “” to “” position: it indicates the power of the virtual house is on, at this point of time, this is the front/sidewise position, and the control radius of the virtual house is 4 m.

Instructions for the Virtual Blocker

1. Before use, remove the underside plate of the battery compartment of the virtual blocker, and insert two D batteries according to the polarity indicated by the instructions into the compartment (Fig. 3).

Attention: Incorrect battery installation will damage the virtual blocker.

2. The battery life depends on the emission direction, distance, and time of use. To make efficient use of the battery, please select an appropriate emission direction and distance to reduce the transmission power; and when the virtual blocker is not in use, please turn off the power.
3. The virtual blocker can typically be placed at a staircase or in a doorway.
4. When using the virtual blocker, ensure the virtual blocker and the cleaner are placed on the same level and that there is no obstruction in front of the virtual blocker (Fig. 4).
5. During use, the emission distance of the virtual blocker depends on the environment, the movement of the cleaner, and battery level.
6. When installing, keep the virtual blocker 50cm or more from the cleaner to avoid interference.
7. Do not point the infrared emission window at eyes.

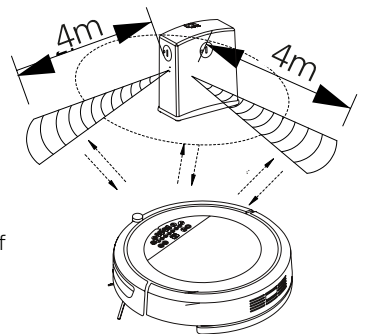

Product Maintenance

Installation & removal of the dust bin

01. Press "PUSH" on the panel to pop out the dust cover (Fig. 1).
02. Take out the dust bin (Fig. 2).

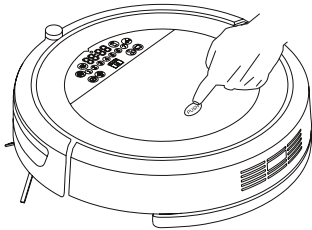


Fig.1

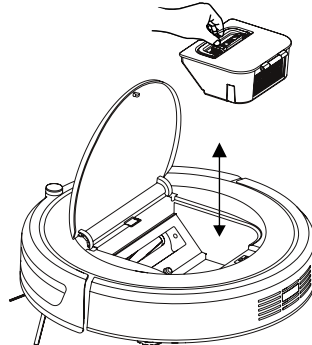


Fig.2

Cleaning of the dust bin

01. Open the upper cover of the dust bin, pour out the dirt and other junk (Figs. 3,4, and 5).
02. The dust bin and the filter screen can be rinsed with water (Fig. 6).

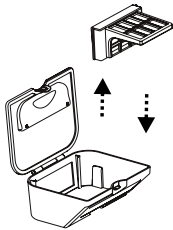


Fig.3

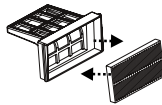 


Fig.4

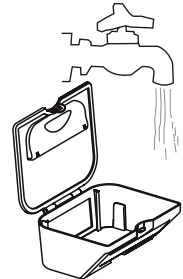


Fig.5



Attention

1. After rinsing, dry the dust bin, filter and HEPA before replacing them (with cool air from an electric hair drier).
2. Please strictly follow the instructions when removing and installing the dust bin.

Product Maintenance

Removing the Roller Brush

1. As shown in Fig. 1, pick the U shaped clip each side of the sweeping bracket simultaneously with both index fingers to remove sweeping bracket.
2. As shown in Fig. 2, pull up the left end of the roller brush with a hand to take out .
As shown in Fig. 3, clean the hair off the brush, or wash it with water (do not replace it until it becomes dry after washing).
3. As shown in Fig. 4, an enlarged view of the left part, remove the brush tube retainer on the left of the roller brush, clean the hair off the retainer.
4. As shown in Fig.5, an enlarged view of the upper left part, remove the brush tube retainer on the left of the roller brush, pull out the special brush strip of ONE COVER ALL to proceed with deep cleaning or replacement (please contact your local dealer to purchase special ONE COVER ALL brush strips for replacement).

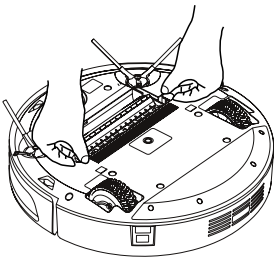


Fig.1

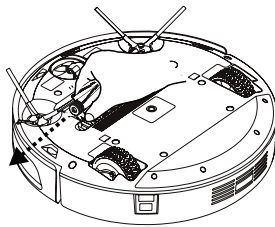


Fig.2

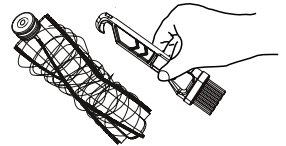


Fig.3

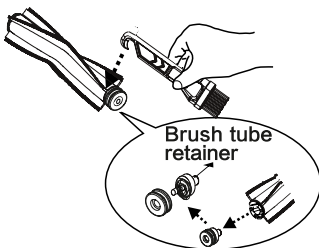


Fig.4

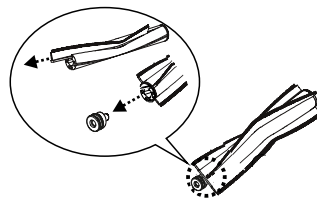


Fig.5

Product Maintenance

Installing the Roller Brush

1. As shown in Fig. 1, an enlarged view of the upper right part, fit the right end of the assembly into the drive shaft of the cleaner and make sure the shaft of the roller brush aligns with the drive shaft.
2. As shown in Fig. 2, an enlarged view of the upper right part, after installing the roller brush, make sure the brush's left semicircular flexible plastic member is horizontally put in the slot.
3. As shown in Fig. 3, align the two snaps towards the two U-shaped recesses on the surface of the cleaner and press them down to fit.

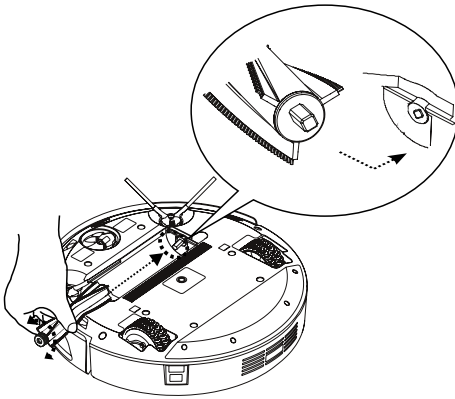


Fig.1

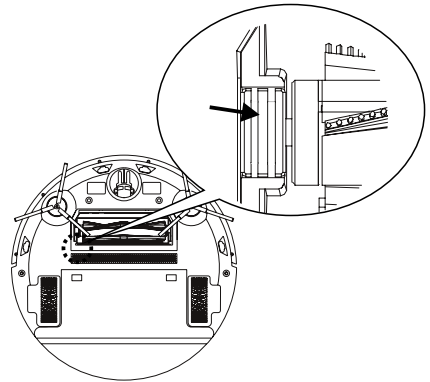


Fig.2

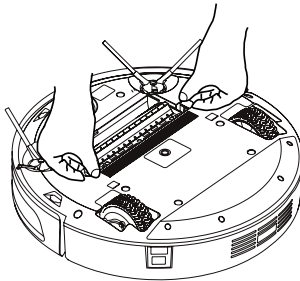


Fig.3

Product Maintenance

Installation of the suction inlet

1. Installation of the suction inlet:
 - 1.As shown in Fig. 1, pick the U shaped clip each side of the sweeping bracket simultaneously with both index fingers to remove sweeping bracket.
 2. As shown in Fig. 2, pull up the left end of the ONE COVER ALL brush assembly with a hand to take out the assembly.
 3. As shown in Fig.3, install the suction inlet onto the cleaner, and the pure vacuum function is available (Fig. 4).

Removal of the suction inlet

1. Follow the same steps 1 and 3 for removal of the Suction Inlet.

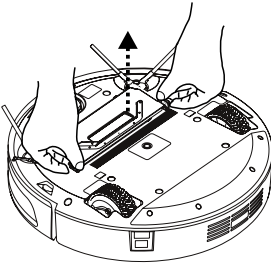


Fig.1

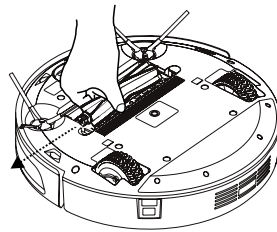


Fig.2

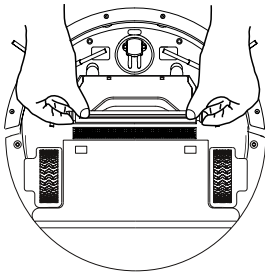


Fig.3

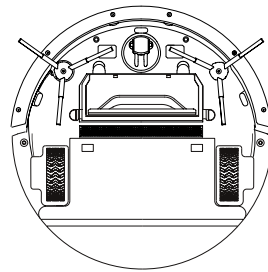


Fig.4

Product Maintenance

Installing the Trailing Bar and Mop

1. Install the mop onto the position where it is to be adhered.
2. As shown in Fig. 1, mount the trailing bar onto the unit by aligning it with holes.

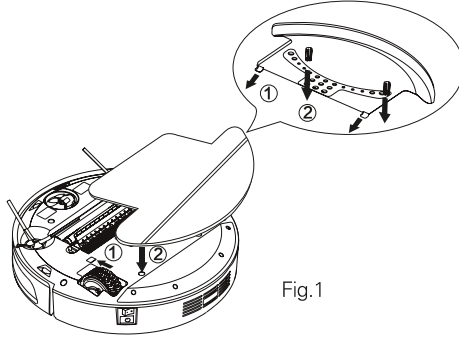


Fig.1

Installing the Water Tank

1. As shown in Fig. 2, mount the small dust bin onto the water tank first before use.
2. As shown in Fig. 3, take out the water tank, open the flexible plastic inlet, inject clear water, and replace the inlet lid.
3. As shown in Fig. 4, place the water tank into the cleaner, replace the cover and the unit is ready to mop.

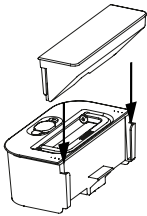


Fig.2

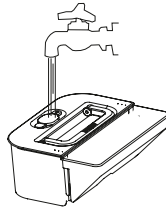


Fig.3

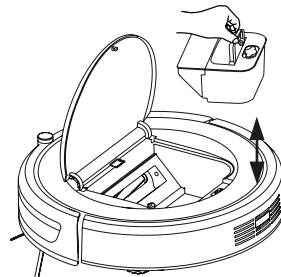


Fig.4



Attention

1. Before injecting water into the water tank, take the tank out rather than directly replenishing the water tank lest any water go into the unit and lead to short circuit.
2. When using the water tank, it is prohibited to turn over the unit, lest water get into the machine and cause damage.
3. After the water tank is refilled, clean it if there is water around the water tank.
4. The cleaner will make a voice prompt “inject water, please” if the water tank runs out of water (see page 8 for more).

Error Codes and Troubleshooting



Attention

The cleaner will sound the alarm when it stops working or fails to start working in the following circumstances; users may follow the prompts to respond accordingly.

Failure Code	Cause	Failure Identification	Troubleshooting
E001	Failure of ground detection	The sensor head is blocked or the cleaner unit is stuck in stairs.	Clean the cliff sensor ground detector or manually pick up the main unit
E002	The suction inlet is blocked	The dust sensor head is covered with dust or the passage is blocked	Clean the foreign objects off the dust sensor head and the suction inlet
E003	The left and right wheels fail to work	The left and right drive wheels are entangled with wires	Clean the foreign objects on the left and right wheels to resume operation
E004	Failure of leftward and rightward sweepers	The leftward and rightward sweepers are entangled with wires	Clean the foreign objects on the leftward and rightward sweepers to resume operation
E005	The left and right wheels are off the ground	The drive wheels are in the air.	Place the main unit back onto a flat ground to resume operation
E006	Failure of the central sweeper	The central sweeper is entangled with wires	Clean the foreign objects on the central sweeper to resume operation
E007	Low battery	The main unit won't work properly	Manually move the main unit back to the docking station recharging
E008	The main unit won't be recharged	The power switch of the main unit is not turned on or the battery is not connected in place	Turn the power switch of the main unit to ON or properly place the battery in place
E009	Wall detection failure	The sensor head for wall detection is blocked.	Clean the transparent front collision member of the main unit to resume operation
E010	Front bumper	The switch and the front bumper blocked	Push heavily the front bumper, then check whether the front bumper can bounce back
E011	Battery NTC	Check if the battery is properly installed	Unplug the battery terminals or replace the battery
E012	Low level of the water tank	Check whether there is water in the water tank	Take out the water tank and fill it with water



Attention

If failure persists after troubleshooting instructed above, please contact our after-sale service department.

Technical Specifications

Technical specification for the main unit

No.	Item	Index parameter	Remark
1	Model	Hovo 780	
2	Rated voltage	DC 14.8V	
3	Rated power	30W	
4	Operating temperature range	-10°C ~45°C	
5	Input voltage/current	DC 24V/0.5A	
6	Infrared remote control	38KHZ	
7	Dimension	Φ 340mmX87.5mm	
8	Weight	2.9KG	
9	Battery	Lithium-ion 2200mAh	
10	Dust bin capacity	900ml	
11	Small dust bin and water tank	250ml+600ml	

Technical specification for the recharging bay

No.	Item	Index parameter	Remark
1	Applicable model	Hovo 780	
2	Dimension	L × W × H: 194X15X105 mm	
3	Input voltage/current	DC 24V/0.5A	
4	Operating temperature range	-10°C ~45°C	
5	Operating humidity range	≤ 85RH	

Technical specification for the remote controller

No.	Item	Index parameter	Remark
1	Applicable model	Hovo 780	
2	Dimension	L × W × H: 146X45X15 mm	
3	Battery	DC 3V(AAA)	
4	Remote control method	Infrared	
5	Emitting and receiving distance	≤ 5M	
6	Operating temperature range	-10°C ~45°C	
7	Operating humidity range	≤ 85RH	

Technical specification for the virtual wall

No.	Item	Index parameter	Remark
1	Applicable model	Hovo 780	
2	Dimension	L × W × H: 78X64X105	
3	Battery	DC 3V(A)	
4	Emission method	Infrared	
5	Emitting distance	≤ 4m	
6	Operating temperature	-10°C ~45°C	
7	Range	≤ 85RH	



"CE" marking states that the product is compliant to European Directives
Low Voltage Directive(LVD)2014/35/EU
2004/108/EC EMC Directive

It is possible to request a full copy of Declaration of compliance to the Distributor:

This product comply with the rules of RoHS Directive(2011/65/EU)

This product comply with the rules of Eup Directive(2009/125/EC)

Metapo, Inc.

www.infinuvo.com

www.metapo.com

For technical support and manufacturer warranty visit support.metapo.com

Warranty services coverage only valid when buying products from our authorized resellers.



REV. A090816